


# To Change Cartridge

## STEP 1

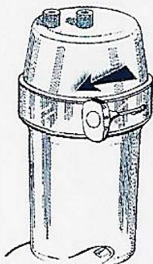

Hold bowl of pressure vessel and pull closure rod toward you.

## STEP 2




Lift cover from bowl.

## STEP 3



Insert new cartridge in to lid of vessel (remove and discard old cartridge).

## STEP 4

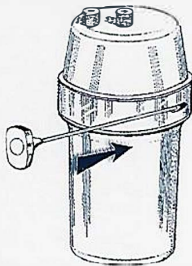

Place cover on bowl and insert closure rod as shown. Gradually feed the rod until fully seated.