



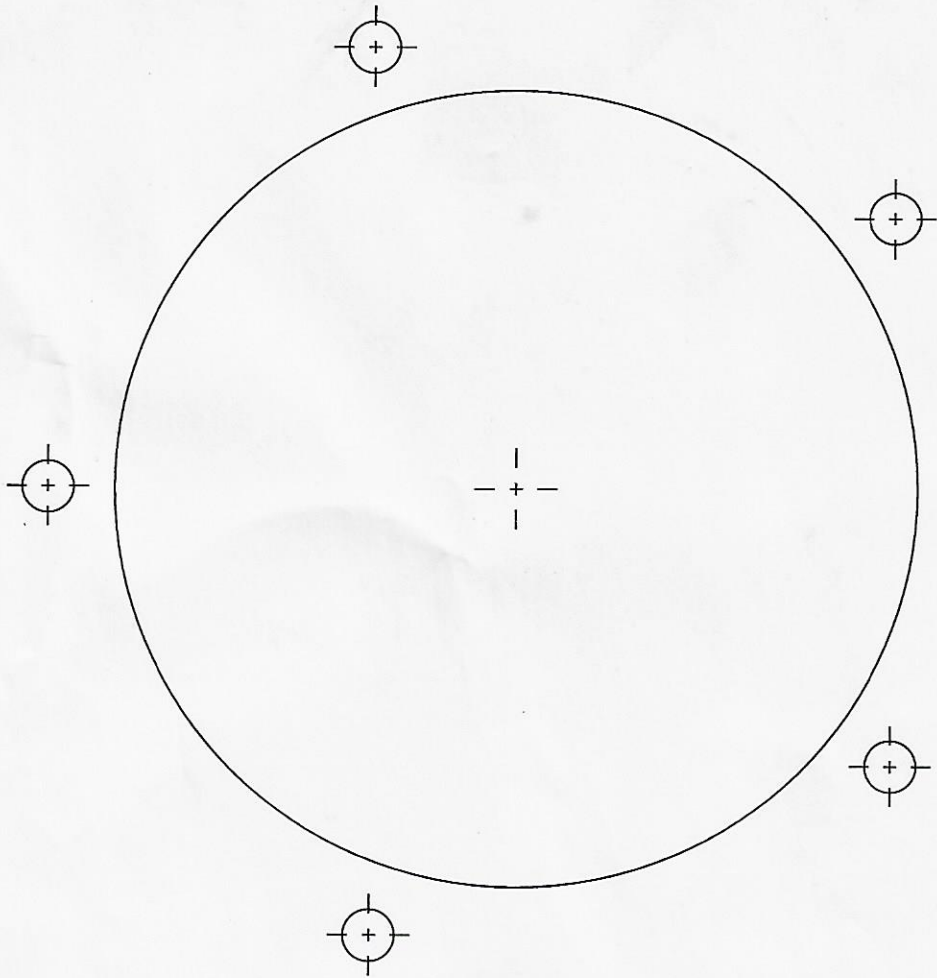

Dometic Tank Flange Kit Installation Instructions

1. Use template to mark holes.
2. Cut large hole using a 4-1/8" (105 mm) hole saw or saber saw.
3. Drill five holes using a 0.265" (7 mm) diameter drill bit.
4. Install flange and gasket using the five screws, washers and nuts provided.

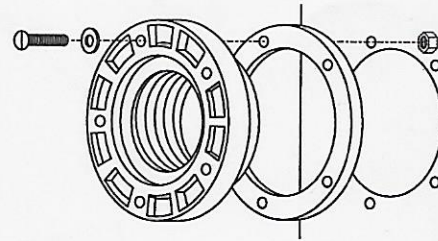

Dometic Corporation, Sanitation Division
 13128 State Rt. 226, P.O. Box 38
 Big Prairie, OH 44611 USA
 1-800-321-9886 • Fax: 330-496-3097
www.Dometic.com

REVISION A

Form No. 600342483 9/17